


# Pre-assembly of your Multi-Site Hydropod System

1. Start out by unpacking all the components. Each Hydropod will need 6 attachments of fittings:

2. Start out by assembling the blue water level indicator. (A) With a small amount of soapy water, lube the grommet at the bottom of the bucket, and carefully press the elbow into the grommet. Turn the grommet/tube vertical and insert the tube end into the plastic hub where the metal handle is attached. This will keep the tube vertical (B)

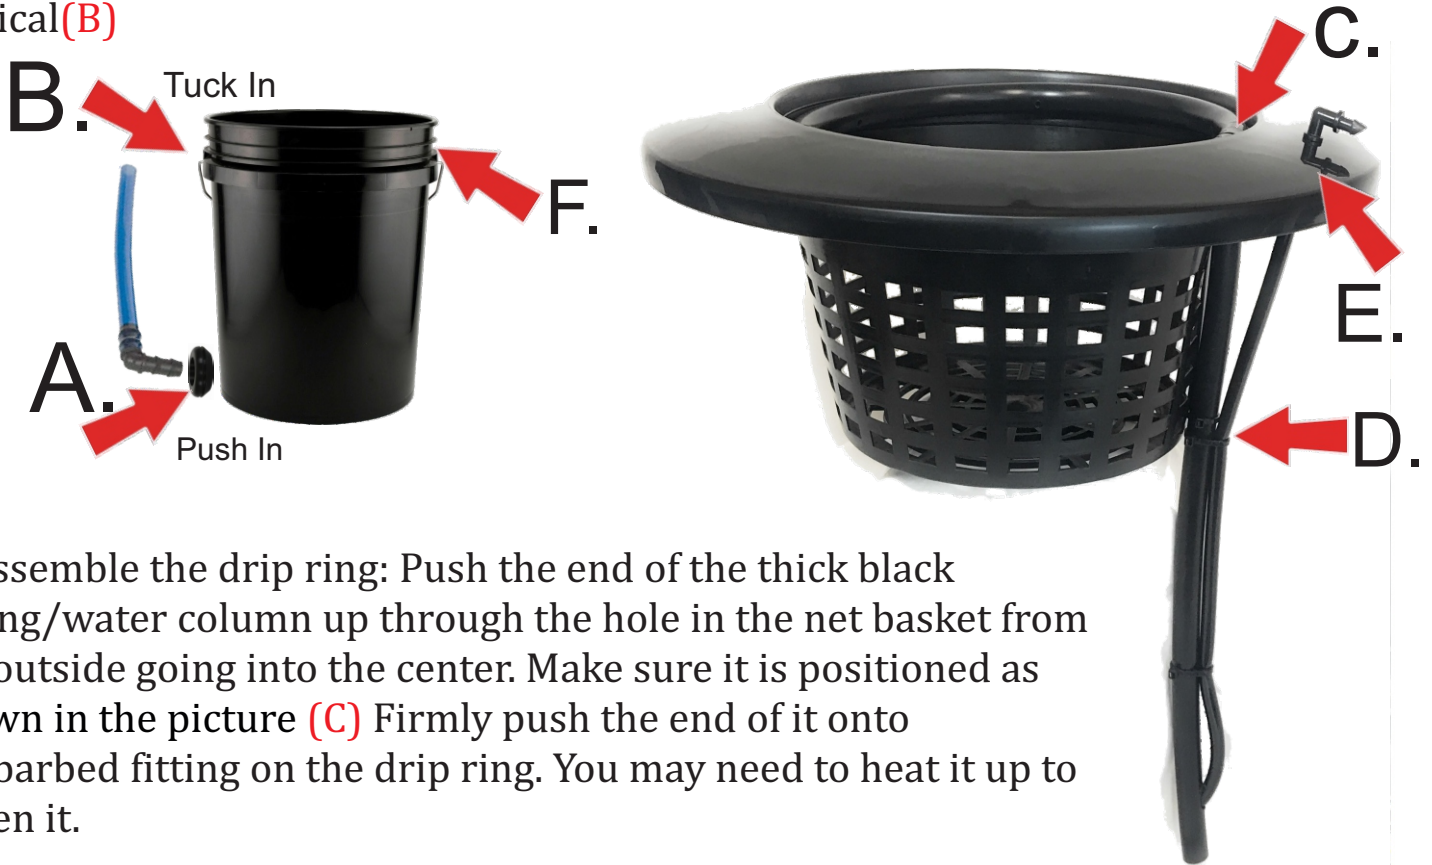

3. Assemble the drip ring: Push the end of the thick black tubing/water column up through the hole in the net basket from the outside going into the center. Make sure it is positioned as shown in the picture (C) Firmly push the end of it onto the barbed fitting on the drip ring. You may need to heat it up to soften it.

4. Use the supplied zip ties to attach the water column to the net pot. (D)

5. Attach the 3/16" (small) barbed elbows to the system: Put the first elbow into the hole on net pot lid from the outside going in. Connect the smaller black tubing from the water column to the elbow on the underside of the net pot. You may need to cut an inch or so off of it so that there is less slack. (E)

6. Attach the other small elbow to the bucket through the small hole at the top. (F) Like the drip ring, push the elbow through the hole from the outside going in. On the inside, connect the clear tubing attached to the airstone to the barb on the inside of the bucket.

**Now just follow the standard setup instructions**